

SONY

Television

Getting Started [1]

- Using the Help Guide [2]
- Introducing Android TV [3]
- Downloading apps from the Google Play [4]
- Moving apps to a USB memory device [5]
- Viewing Internet media [6]
- Enjoying content from your mobile device on the TV with Google Cast [7]
- Enjoying safe apps and video streaming services (Security & restrictions) [8]
- Searching by using your voice [9]
- Basic Operations [10]
- Using the remote control [11]
- Home menu [12]
- Using the DISCOVER button [13]
- Using the Action Menu [14]
- Selecting devices that are connected to the TV [15]
- Identifying the status of the TV through illumination [16]
- Illumination LED [17]
- Illumination at the bottom of the screen [18]
- Support Site [19]

Watching TV [20]

- Watching TV programs [21]
- Using the program guide [22]
- Using interactive broadcast TV services [23]
- Watching in 3D (3D models only) [24]
- Understanding the basics of 3D TV (3D models only) [25]
- Preparing your 3D glasses (3D models only) [26]
- Watching TV in 3D (3D models only) [27]
- Enjoying social networking services while watching TV [28]

Using the TV with Other Devices [29]

- [USB devices \[30\]](#)
- [Playing content stored on a USB device \[31\]](#)
- [Information about USB devices used for storing photos and music \[32\]](#)
- [Supported files and formats \[33\]](#)
- [Photos \[34\]](#)
- [Music \[35\]](#)
- [Videos \[36\]](#)
- [Audio sampling rates \(for videos\) \[37\]](#)
- [External subtitles \[38\]](#)
- [Blu-ray and DVD players \[39\]](#)
- [Connecting a Blu-ray or DVD player \[40\]](#)
- [Watching Blu-ray and DVD discs \[41\]](#)
- [Smartphones and tablets \[42\]](#)
- [Displaying the screen of a smartphone/tablet on the TV using the Screen mirroring function \[43\]](#)
- [Sharing photos/music/videos \[44\]](#)
- [Using the “Video & TV SideView” app with your smartphone/tablet \[45\]](#)
- [Computers, cameras, and camcorders \[46\]](#)
- [Connecting a computer and viewing stored content \[47\]](#)
- [Connecting a camera or camcorder and viewing stored content \[48\]](#)
- [Computer video signal specifications \[49\]](#)
- [Audio system \[50\]](#)
- [Connecting an audio system \[51\]](#)
- [Adjusting audio system-related settings \[52\]](#)
- [Bluetooth devices \[53\]](#)
- [Connecting a Bluetooth device \[54\]](#)
- [Supported Bluetooth profiles \[55\]](#)
- [Sony wireless subwoofer \(optional\) \(Sony wireless subwoofer supported models only\) \[56\]](#)
- [Connecting a wireless subwoofer \(optional\) \[57\]](#)
- [Adjusting wireless subwoofer-related settings \(optional\) \[58\]](#)
- [BRAVIA Sync-compatible devices \[59\]](#)
- [BRAVIA Sync overview \[60\]](#)
- [Using features available for BRAVIA Sync-compatible devices \[61\]](#)
- [Adjusting BRAVIA Sync settings \[62\]](#)

[Connecting an IR Blaster \(IR Blaster compatible models only\)](#) [63]

- [Viewing pictures in 4K from compatible devices](#) [64]
- [Viewing pictures in 4K resolution](#) [65]
- [Settings for viewing pictures in 4K resolution with higher quality](#) [66]

[Connecting to a Network](#) [67]

- [Connecting to a network using a LAN cable](#) [68]
- [Connecting to a network using a wireless connection](#) [69]
- [Using Wi-Fi to connect the TV to your network](#) [70]
- [Using Wi-Fi Direct to connect to the TV \(no wireless router required\)](#) [71]
- [Home network features](#) [72]
- [Adjusting home network settings](#) [73]
- [Playing content from a computer](#) [74]
- [Playing content from a media server](#) [75]
- [RVU statement \(RVU compliant models only\)](#) [76]

[Settings](#) [77]

- [Configuring the TV](#) [78]
- [\[TV\]](#) [79]
- [\[Network & Accessories\]](#) [80]
- [\[System Preferences\]](#) [81]
- [\[Personal\]](#) [82]
- [\[Expert panel settings\]\(only models equipped with an OLED panel\)](#) [83]
- [Setting a timer](#) [84]

[Troubleshooting](#) [85]

- [Start here](#) [86]
- [Self diagnostics](#) [87]
- [Software updates](#) [88]
- [If a full reset \(restart\) of the TV is required](#) [89]
- [Picture \(quality\)/screen](#) [90]
- [Picture quality is not as good as viewed at the store.](#) [91]
- [Distorted picture.](#) [92]
- [The screen flickers.](#) [93]
- [No color/Dark picture/Color is not correct/Picture is too bright.](#) [94]
- [Dark screen. How to brighten the screen.](#) [95]

- [Color is not correct. How to adjust the color tone.](#) [96]
- [Screen format/wide mode changes automatically.](#) [97]
- [Suddenly the picture becomes small.](#) [98]
- [Black bands appear at the edges of the screen.](#) [99]
- [A black box appears on the screen.](#) [100]
- [There are banners/tickers at the top or bottom of the screen.](#) [101]
- [3D pictures are not displayed. The 3D effect is weak. \(3D models only\)](#) [102]
- [Black bars appear on both sides of the screen when watching 3D pictures. \(3D models only\)](#) [103]
- [You cannot turn off 3D display while watching 3D content. \(3D models only\)](#) [104]
- [The message \[3D signal has been detected.\] automatically appears when 3D signal is detected. \(3D models only\)](#) [105]
- [A message about an app asking for permission to access a TV function is displayed.](#) [106]
- [The screen becomes darker after a certain period of time. \(only models equipped with an OLED panel\)](#) [107]
- [The message \[Panel refresh did not finish\] is displayed. \(only models equipped with an OLED panel\)](#) [108]
- [You are concerned about an image retention. \(only models equipped with an OLED panel\)](#) [109]
- [A white line appears on the screen. \(only models equipped with an OLED panel\)](#) [110]
- [Panel refresh does not complete. \(only models equipped with an OLED panel\)](#) [111]
- [Keyboard](#) [112]
- [Broadcast reception](#) [113]
- [Check these things first to troubleshoot your TV reception.](#) [114]
- [Block noise or an error message appears and you cannot watch broadcasts.](#) [115]
- [Ghosting or double images appear.](#) [116]
- [Only snow noise or a black picture appears on the screen.](#) [117]
- [There is picture or sound noise when viewing an analog TV channel.](#) [118]
- [Some channels are blank.](#) [119]
- [Poor reception or poor picture quality with digital broadcasts.](#) [120]
- [You cannot view digital channels.](#) [121]
- [You cannot receive or select channels.](#) [122]
- [Some digital cable channels are not displayed.](#) [123]
- [Broadcast HD formats have poor quality.](#) [124]
- [Sound](#) [125]
- [No sound but good picture.](#) [126]

- [Audio noise.](#) [127]
- [No audio or low audio with a home theater system.](#) [128]
- [Distorted sound.](#) [129]
- [Headphone volume cannot be adjusted.](#) [130]
- [Network \(Internet/home\)/apps](#) [131]
- [The network name \(SSID\) of the wireless router \(access point\) to which you want to connect is not displayed.](#) [132]
- [Sometimes video streaming quality is poor.](#) [133]
- [Wi-Fi connection is lost or intermittent.](#) [134]
- [Certain Internet video content displays a loss of detail.](#) [135]
- [Good picture quality but no sound on Internet video content.](#) [136]
- [Apps are inaccessible.](#) [137]
- [The TV cannot access the Internet when IPv6 is set.](#) [138]
- [Your TV cannot connect to the server.](#) [139]
- [A message appears stating that the TV cannot connect to your network.](#) [140]
- [You can connect to the Internet, but not to Google services.](#) [141]
- [You cannot add a Google account.](#) [142]
- [Remote control/accessories](#) [143]
- [The remote control does not operate.](#) [144]
- [You cannot turn the Active 3D Glasses on. \(3D models only\)](#) [145]
- [The LED indicator on the Active 3D Glasses blinks. \(3D models only\)](#) [146]
- [Power](#) [147]
- [The TV turns off automatically.](#) [148]
- [The TV turns on automatically.](#) [149]
- [After unplugging the TV and plugging it in again, the TV does not turn on even if you press the power button on the remote control or the TV.](#) [150]
- [Connected devices](#) [151]
- [No picture from a connected device.](#) [152]
- [You cannot select a connected device in the Home Menu.](#) [153]
- [Certain programs on digital sources display a loss of detail.](#) [154]
- [Photo images or folders take time to display.](#) [155]
- [You cannot find a connected BRAVIA Sync HDMI device.](#) [156]
- [You cannot control a second AV receiver.](#) [157]
- [An external device \(such as a set-top box or AV receiver\) cannot be controlled via the IR Blaster. \(IR Blaster compatible models only\)](#) [158]

- [Some media files in the USB device or server are not displayed.](#) [159]
- [The TV cannot be found by a Wi-Fi Direct device.](#) [160]
- [Operation cuts out, or a device does not work.](#) [161]
- [What kind of devices can be connected using the Screen mirroring function?](#) [162]
- [The TV cannot connect to a Miracast device or Screen mirroring compatible device.](#) [163]
- [Video or sound sometimes cuts out.](#) [164]
- [Some paid content cannot be played.](#) [165]
- [The TV cannot be turned on and controlled by using the “Video & TV SideView” app when \[Remote start\] is enabled.](#) [166]
- [The TV does not appear on or cannot be registered with the “Video & TV SideView” app.](#) [167]
- [Illumination LED](#) [168]
- [The illumination LED or bottom of the screen sometimes lights up.](#) [169]
- [You want to disable the illumination LED so that it does not light up or blink.](#) [170]

[Index](#) [171]

[1]

Getting Started

[Using the Help Guide](#)

[Introducing Android TV](#)

[Basic Operations](#)

[Support Site](#)

[2] Getting Started

Using the Help Guide

This Help Guide explains how to use this TV. Additionally, you can also refer to the Setup Guide for descriptions about TV installation, and the Reference Guide for parts descriptions and specifications of this TV.

In this Help Guide, you can read the desired information in order or search for it directly. To search,

 
For Passive 3D Glasses

If Passive 3D Glasses are supplied with your TV, use them. If no glasses are supplied, purchase a pair of Passive 3D Glasses, model TDG-500P. You can watch in 3D by just putting the Passive 3D Glasses on.

For Active 3D Glasses


If Active 3D Glasses are supplied with your TV, use them. If no glasses are supplied, purchase a pair of Active 3D Glasses, model TDG-BT500A. Before using the Active 3D Glasses for the first time, you need to register them to your TV. Follow the steps below.


- 1 Remove the battery's insulation sheet.

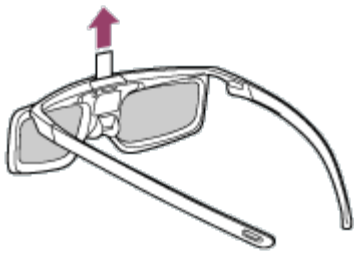

- 2 Turn the TV on, then hold the glasses within 50 cm (1.6 ft.) of the TV.

  - 3 Press and hold the  (Power) button/indicator on the glasses for 2 seconds.

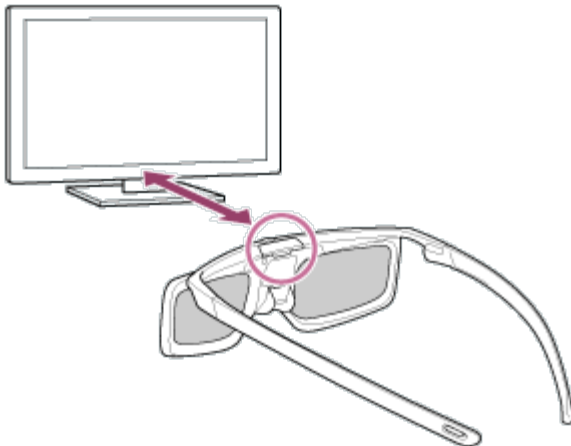

The Active 3D Glasses turn on and registration starts (the  (Power) button/indicator blinks green and yellow). When registration is finished, a message appears in the TV screen for 5 seconds, and the indicator lights up in green for 3 seconds.

If registration fails, the Active 3D Glasses will turn off automatically. In this case, repeat the procedure above.

- 4 Put the Active 3D Glasses on.

