

Before setup, please confirm the following.

**Supplied accessories**

AC adapter (1)




AC power cord (1)



Remote control (Remote) (with CR2032 battery) (1)



Audio/video cable (phono plug x 3) (1)

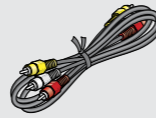

HDMI cable (1) (SMP-NX20 only)

**Additional items required (not supplied)**

- TV
- HDMI cable (for a high-definition TV)
- Broadband Internet connection
- LAN cable (for a wired connection)
- Wireless LAN router (for a wireless connection)


Follow the next five easy steps to use the player.




**1 Connect to your TV**

**For a high-definition TV**

Using a HDMI cable is recommended.

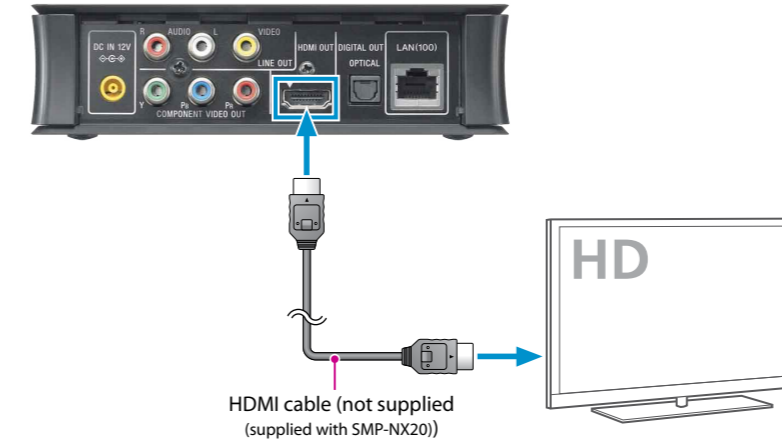

**For a standard-definition TV**

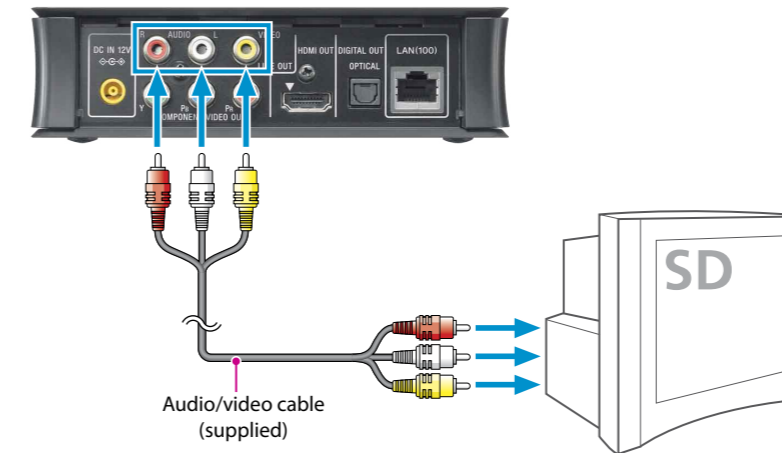


**2 Power on**

**1** Connect the AC adapter and AC power cord, and then insert the plug into the AC outlet.



After connecting, the player will automatically enter standby in about 30 seconds.

**2** Remove the insulation film from the remote.

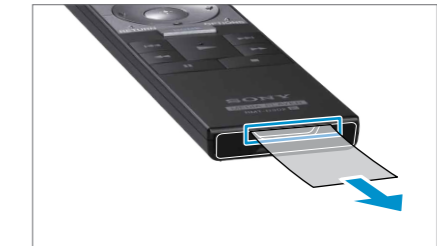


**3** Press to turn on the player.



**4** Turn on the TV and set it to the input that the player is connected to.

### 3 Prepare for network connection

#### ■ For a wired connection

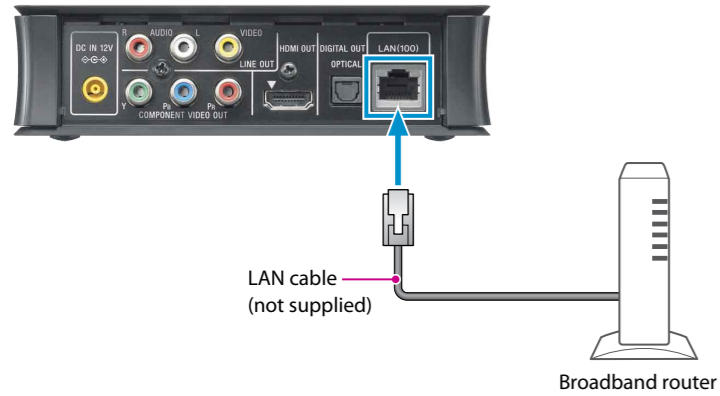

#### ■ For a wireless connection




Check your network name.  
If security is set on your network connection, check your security key (password).  
For details on the wireless settings of your router, please visit the following website, and then enter the model name of your player (SMP-N200 or SMP-NX20).  
<http://esupport.sony.com/>

### 4 Easy Setup

Follow the on-screen instructions to make the basic settings using ←/↑/↓/→ and + (ENTER).




#### ■ If a software update message appears

Follow the on-screen instructions to update it.  
— After the software update, turn on the player again.  
— If  is displayed on the home menu, select it.

### 5 Service registration

Register your player online to stream movies, TV shows and music.

1 Press HOME, and select “Activate Enhanced Features” from “Network” to obtain your registration code.

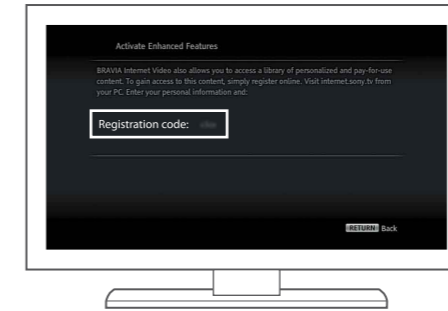

2 Write down your registration code in the box below.















3 Visit [www.internet.sony.tv](http://www.internet.sony.tv) with your PC and follow the instructions to access existing Sony Style account or create a new one.

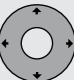

**Now you are ready to enjoy a variety of movies, TV shows, videos, music and more with the Sony Entertainment Network.**

Selecting premium services may require additional activation and fees.

### Basic remote functions

Function	Button
Turn on the player, or enter standby mode.	
Shortcut keys for interactive functions.	
Display the playback and web browsing information.	
Access the SEN (Sony Entertainment Network) online service.	
Move the highlight to select a displayed item.	
The available options menu appears.	
Enter the selected item.	
Return to the previous display.	
Enter the player's home menu.	
Fast reverse/fast forward when pressed during playback.	
Skip to the previous/next chapter, track, or file.	
Stop playback.	
Start or re-start playback.	
Pause or re-start playback.	

For more information on the player, please contact to Sony Customer Information Service Center.  
Website: <http://esupport.sony.com/>  
Phone: 1-866-909-SONY (7669)