



Personal Audio System
SRS-X3



The following explains how to use this speaker. Select a topic from the navigation pane on the left.

How to Use

[Getting Started](#) >

[Making connections](#) >

[Listening to music](#) >

[Phone calls](#) >

[Information](#) >

Troubleshooting

[Troubleshooting](#) >

[Speaker](#) >

[BLUETOOTH](#) >

[Additional information](#) >

[How to Use](#)



[Troubleshooting](#)



Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Getting Started

[Overview](#)



[Parts and controls](#)



[Included items](#)



[Power source](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Making connections

[BLUETOOTH](#)



[Portable audio device, etc. \(AUDIO IN\)](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Listening to music

[BLUETOOTH device](#)



[Portable audio device, etc. \(AUDIO IN\)](#)



[Surround effect](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Phone calls


[Phone calls](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

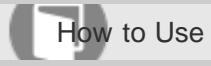

How to Use

Personal Audio System
SRS-X3

Information

[Specifications](#)



[Notes on use](#)



[Trademarks](#)



[Support website](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Troubleshooting

[Troubleshooting](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Speaker

[Power supply](#)



[Sound](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

BLUETOOTH

[Pairing](#) 

[One-touch connection \(NFC\)](#) 

[Phone calls](#) 

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Additional information

[Reset](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

How to Use

Getting Started

Overview

- [What you can do with the speaker](#)

Parts and controls

- [Parts and controls](#)

Included items

- [Checking the included items](#)

Power source

- [Connecting to an AC outlet](#)
- [Turning the power on](#)
- [Turning the power off](#)
- [Using the BLUETOOTH standby function](#)
- [Auto power off function](#)

Making connections

BLUETOOTH

- [How to make wireless connection with BLUETOOTH devices](#)
- [Pairing and connecting with a BLUETOOTH device](#)
- [Connecting with a paired BLUETOOTH device](#)
- [Connecting with a smartphone by one touch \(NFC\)](#)
- [Disconnecting the smartphone by one touch \(NFC\)](#)
- [Switching devices by one touch \(NFC\)](#)

Portable audio device, etc. (AUDIO IN)

- [Connecting to a portable audio device, etc.](#)

Listening to music

BLUETOOTH device

- [Listening to music of a device via BLUETOOTH connection](#)
- [Terminating the BLUETOOTH connection \(After use\)](#)

Portable audio device, etc. (AUDIO IN)

- [Listening to music of a portable audio device, etc.](#)

Surround effect

- [Enjoying the surround effects](#)

Phone calls

Phone calls

- [Receiving a call](#)
- [Making a call](#)
- [Terminating the BLUETOOTH connection \(After use\)](#)
- [Button functions for a phone call](#)
- [Making a call while playing back music \(Multi point connection\)](#)

Information

Specifications

- [About the indicators](#)

Notes on use

- [Precautions](#)
- [Notes on charging](#)
- [What is BLUETOOTH wireless technology?](#)

Trademarks

- [Trademarks](#)

Support website

- [Customer support websites](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Troubleshooting

Troubleshooting

Troubleshooting

- [What can I do to solve a problem?](#)

Speaker

Power supply

- [Unable to turn on the speaker or charge the built-in battery](#)

Sound

- [No sound/Sound from only one speaker/Low sound level](#)
- [Distorted sound/Humming or noise in the speaker output](#)

BLUETOOTH

Pairing

- [Unable to pair the speaker with a BLUETOOTH device](#)

One-touch connection (NFC)

- [Unable to connect the speaker to a BLUETOOTH device with One-touch connection \(NFC\)](#)

Phone calls

- [No voice/Low voice from callers](#)

Additional information

Reset

- [Using the RESET button](#)
- [Initializing the speaker](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation



Before use

To make full use of this content, please read the following notes thoroughly. Please note that they are subject to change without prior notice.

Recommended system environment

The following system environments are recommended for displaying this content. You may not be able to view the content on other system environments.

For viewing on a computer

Recommended browser

- With Microsoft Windows
 - Microsoft Internet Explorer 8 or later
 - Mozilla Firefox: latest version
 - Google Chrome™ : latest version
- With Apple Mac OS
 - Apple Safari Ver. 5 or later
 - Mozilla Firefox: latest version
 - Google Chrome : latest version

For viewing on a smartphone or tablet

Basic operation has been confirmed on the standard browser for the noted devices running the following operating systems.

- Android™ 2.3 or later: Xperia series, Walkman running Android
- iOS 4 or later: iPhone, iPod touch, iPad

JavaScript

JavaScript is used with this content for viewing convenience. If JavaScript is disabled in your web browser settings, the content may not operate properly or it may not be displayed correctly.

Style Sheets

Cascading Style Sheets are used in designing this content. Page layout may not be as intended if you view the content with style sheets disabled or on a web browser that is not compatible with style sheets. However, operation will not be affected.

Cookies

This content uses cookies. To use services incorporating cookies, you need to set your browser to allow cookies.

Handling of personal information obtained from websites

Sony may use cookies, web beacons or similar technologies to make statistical analysis of customers' usage of this content while preserving anonymity.

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Overview

[What you can do with the speaker](#)

Introduction to the main features



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Parts and controls

[Parts and controls](#)

Names of buttons, connections and indicators on the speaker.



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Included items

[Checking the included items](#)

Check that all items are packed with the speaker before use.



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Power source

[Connecting to an AC outlet](#)

You can charge the speaker from an AC outlet via the USB AC adaptor (supplied).

[Turning the power on](#)

You can turn on the speaker.

[Turning the power off](#)

You can turn off the speaker.

[Using the BLUETOOTH standby function](#)

The speaker turns on automatically by operating a BLUETOOTH device, and starts the BLUETOOTH connection.

[Auto power off function](#)

If no operation is performed and no sound is input for about 15 minutes, the speaker turns off automatically.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

BLUETOOTH

[How to make wireless connection with BLUETOOTH devices](#)

The overview of pairing and BLUETOOTH connection with BLUETOOTH device

[Pairing and connecting with a BLUETOOTH device](#)

You can register (pair) a BLUETOOTH device and the speaker with each other, and make a BLUETOOTH connection.

[Connecting with a paired BLUETOOTH device](#)

You can connect the speaker with a BLUETOOTH device that is already paired.

[Connecting with a smartphone by one touch \(NFC\)](#)

By touching the speaker with an NFC-compatible smartphone, the speaker turns on automatically, then proceeds to pairing and making BLUETOOTH connection.

[Disconnecting the smartphone by one touch \(NFC\)](#)

You can disconnect the speaker from the connected smartphone by touching the speaker with it.

[Switching devices by one touch \(NFC\)](#)

You can switch devices by touching a new device once on the speaker.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Portable audio device, etc. (AUDIO IN)

[Connecting to a portable audio device, etc.](#)

You can connect a portable audio device, etc., using an audio cable (not supplied).



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

BLUETOOTH device

[Listening to music of a device via BLUETOOTH connection](#)

You can enjoy listening to music of your BLUETOOTH device wirelessly via BLUETOOTH connection.

[Terminating the BLUETOOTH connection \(After use\)](#)

After use, terminate the BLUETOOTH connection between the speaker and a BLUETOOTH device.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Portable audio device, etc. (AUDIO IN)

[Listening to music of a portable audio device, etc.](#)

You can enjoy music of a portable audio device, etc., connected to the AUDIO IN jack.



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Surround effect

[Enjoying the surround effects](#)

You can enjoy music with surround effects.



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Phone calls

[Receiving a call](#)

You can receive an incoming call to a BLUETOOTH mobile phone using the speaker by the hands-free function.

[Making a call](#)

You can make a call with a BLUETOOTH mobile phone using the speaker by the hands-free function.

[Terminating the BLUETOOTH connection \(After use\)](#)

After use, terminate the BLUETOOTH connection between the speaker and a BLUETOOTH device.

[Button functions for a phone call](#)

You can operate your BLUETOOTH mobile phone by the speaker via BLUETOOTH connection.


[Making a call while playing back music \(Multi point connection\)](#)

While listening to music from a BLUETOOTH music player, you can receive an incoming call to another BLUETOOTH mobile phone.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

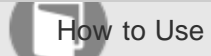

Personal Audio System
SRS-X3

Specifications

[About the indicators](#)

The indicators show the status of the speaker.



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Notes on use

[Precautions](#)

Precautions on safety and use, etc.



[Notes on charging](#)

Notes about the built-in battery of the speaker



[What is BLUETOOTH wireless technology?](#)

BLUETOOTH wireless technology is a short-range wireless technology that enables wireless data communication between digital devices, such as a computer and digital camera.



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Trademarks

[Trademarks](#)


List of trademarks/registered trademarks



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

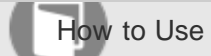

How to Use

Personal Audio System
SRS-X3

Support website

[Customer support websites](#)

URLs of the customer support websites



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Troubleshooting

[What can I do to solve a problem?](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Power supply

[Unable to turn on the speaker or charge the built-in battery](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Sound

[No sound/Sound from only one speaker/Low sound level](#)



[Distorted sound/Humming or noise in the speaker output](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Pairing

[Unable to pair the speaker with a BLUETOOTH device](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

One-touch connection (NFC)

[Unable to connect the speaker to a BLUETOOTH device with One-touch connection \(NFC\)](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Phone calls

[No voice/Low voice from callers](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Reset

[Using the RESET button](#)



[Initializing the speaker](#)



[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



What you can do with the speaker

- One-touch connection (NFC)
- BLUETOOTH Ver. 2.1 + EDR (Enhanced Data Rate)
- Compatible BLUETOOTH profile*: A2DP, AVRCP, HFP, HSP
- By connecting the speaker with a smartphone via BLUETOOTH, you can talk hands-free using the built-in microphone and speaker.
- "Noise suppression" and "Echo cancellation" enable phone calls with high-quality sound.
Noise suppression: Noise picked up by the speaker is suppressed, so the caller will hear your voice with less noise.
Echo cancellation: By reducing sound from the speaker picked up by the speaker microphone, echoes generated by the caller's phone will be suppressed.
- You can enjoy up to about 7 hours of continuous wireless music playback with the built-in lithium ion rechargeable battery.
- BLUETOOTH standby function
- External input jack: AUDIO IN
- Charging the speaker by connecting the USB AC adaptor supplied

*BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.


[Notes on use](#)

4-544-752-11(1)





Copyright 2014 Sony Corporation

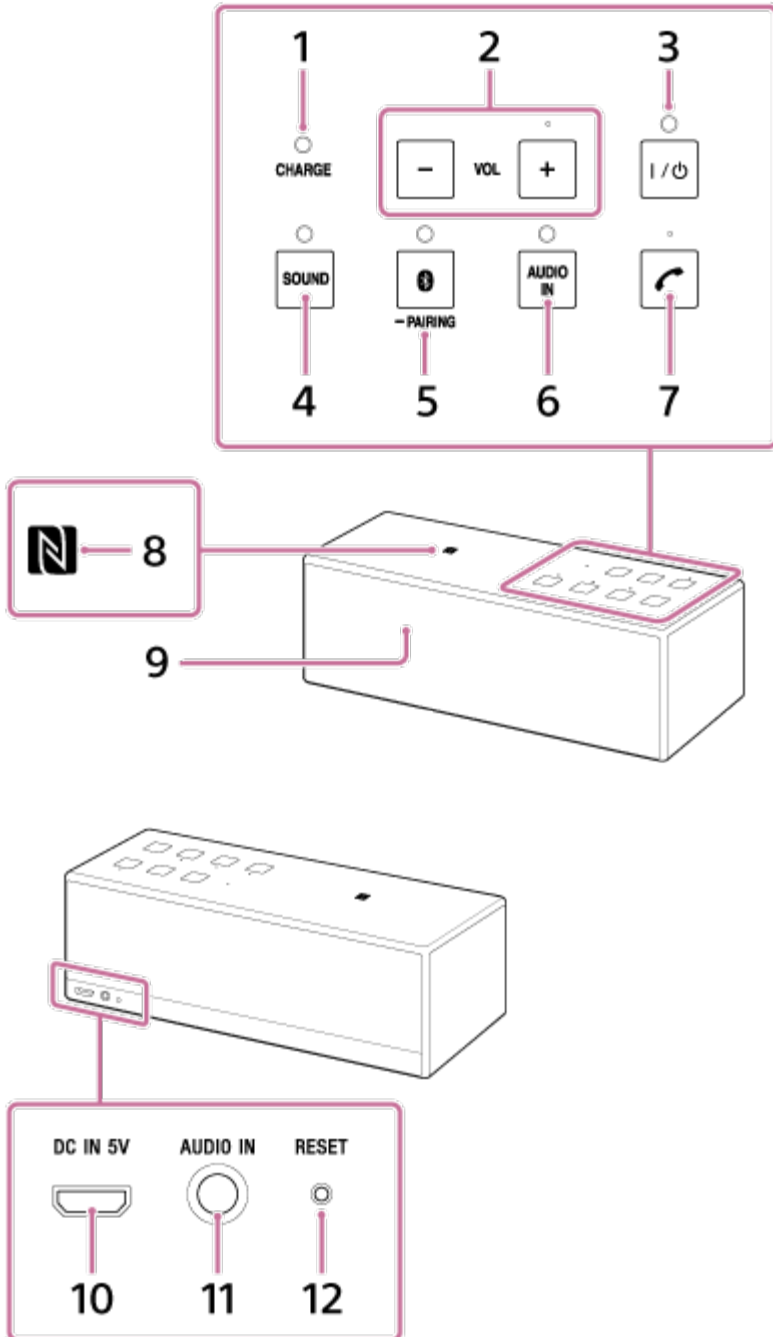Personal Audio System
SRS-X3

Parts and controls



1. CHARGE indicator

2. VOL (volume) +/- buttons
3. | /  (power) button/indicator
4. SOUND button/indicator
5.  (BLUETOOTH)  PAIRING button/indicator
6. AUDIO IN button/indicator
7.  (call) button
8. N-mark
9. Microphone
10. DC IN 5 V jack
11. AUDIO IN jack
12. RESET button

Related Topic

- [About the indicators](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Checking the included items

After opening the package, check that all items in the list below are included in the package.

If any items are missing, contact your dealer.

Numbers in () indicate the item amount.

- Personal audio system (SRS-X3) (1)
- USB AC adaptor (1)
- Plug (2) (depending on your region/country)
- Micro-USB cable (800 mm (31 in)) (1)
- Quick Start Guide

Provides you with instructions on how to connect the speaker with BLUETOOTH devices and basic operations.

- Reference Guide
Provides you with precautions and product specifications.
- Warranty card (depending on your region/country)

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Connecting to an AC outlet

The speaker can operate by USB AC adaptor (supplied) or built-in battery (rechargeable).

Charge the battery before using the speaker for the first time.


You can operate the speaker by battery instead of the USB AC adaptor by charging the speaker before use.

1. Connect the USB AC adaptor (supplied) to the micro-USB cable (supplied).

2. Connect the micro-USB cable to the DC IN 5 V jack.

3. Plug the USB AC adaptor to an AC outlet.

Do not use any USB AC adaptor or micro-USB cable other than the supplied ones.

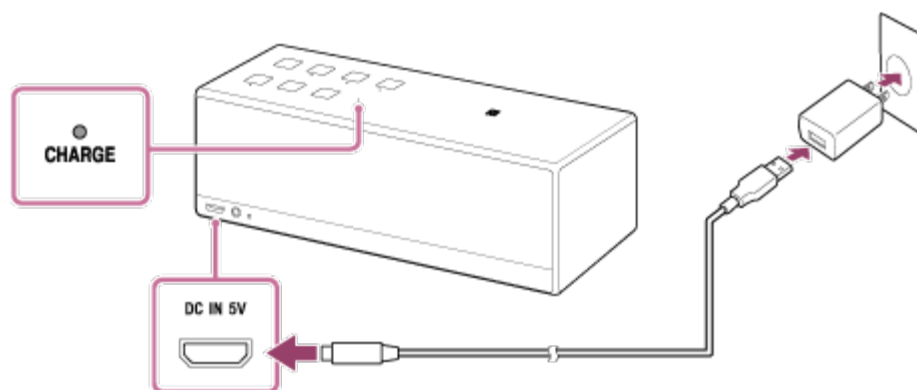

When the speaker is connected to an AC outlet via the USB AC adaptor, charging starts and the CHARGE indicator lights up in orange. Charging is completed in about 5 hours* and the indicator goes off.

*Time that is required to charge the empty battery to its full capacity.

Battery life (when using the BLUETOOTH connection)

About 7 hours.

Time stated above may vary, depending on ambient temperature or conditions of use.

When the battery is running low

- When the CHARGE indicator flashes slowly in orange, the battery is running low and needs to be charged.
- If the CHARGE indicator flashes 3 times in orange and goes off when you turn on the speaker, the battery is empty and needs to be charged.

For customers in Europe

The shape of the USB AC adaptor is slight different from the illustration, and alternative plugs are supplied. Attach a plug appropriate to your country/region to the USB AC adaptor beforehand.

Note

- When you use the speaker at a loud volume, the battery may run low, even if the speaker is connected to the USB AC adaptor. If you want to use the speaker while charging, lower the volume of the speaker. Otherwise, turn off the speaker and charge the battery fully before use.
- When you switch the power source between USB AC adaptor and battery by connecting/disconnecting the USB AC adaptor, the speaker may stop sound output for a short while. This is not a malfunction.
- The maximum power output will be lower when the battery is running low.
- In an extremely cold or hot environment, charging may end prematurely or may not be possible.
- When the battery is running low, even if you press the **| / ⏻** (power) button, the speaker may turn off after the CHARGE indicator flashes in orange 3 times. This is not malfunction.
- Even if you do not intend to use the speaker for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.

Related Topic

● [Turning the power on](#)

● [Notes on charging](#)



Notes on use


4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Turning the power on

1. Press the  (power) button.
The  (power) indicator lights up in green.

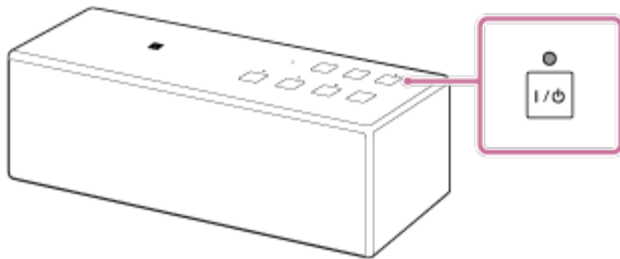**Note**

- If the CHARGE indicator flashes 3 times in orange and goes off when you turn on the speaker, the battery is empty and needs to be charged.
- When the CHARGE indicator flashes slowly in orange, the battery is running low and needs to be charged. In this condition, the volume of the speaker becomes gradually lower. Before charging the speaker, make sure to turn it off.

Related Topic

- [Connecting to an AC outlet](#)
- [Turning the power off](#)



[Notes on use](#)


4-544-752-11(1)

Copyright 2014 Sony Corporation


Personal Audio System
SRS-X3

Turning the power off

1. Press the  (power) button.
The  (power) indicator turns off.

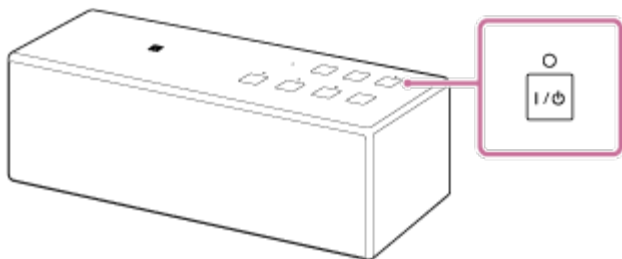

Hint

- If you turn off the speaker while the BLUETOOTH standby function is on, the  (power) indicator lights up in orange and the speaker enters the BLUETOOTH standby mode.

Related Topic

- [Using the BLUETOOTH standby function](#)
- [Auto power off function](#)

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Using the BLUETOOTH standby function

When the BLUETOOTH standby function is turned on, the speaker turns on automatically by operating a BLUETOOTH device, and starts the BLUETOOTH connection.


Before operating the speaker, note the following:


- The BLUETOOTH standby function can be set only when the speaker is connected to an AC outlet via the USB AC adaptor. When the speaker is being powered by the built-in battery only, the BLUETOOTH standby function is not available.
- If pairing information is not stored in the speaker, such is the case when the speaker is shipped from the factory, the speaker will not enter the BLUETOOTH standby mode.

1. Connect the speaker to the AC outlet.

2. Turn on the speaker.

The  /  (power) indicator lights up in green.


 


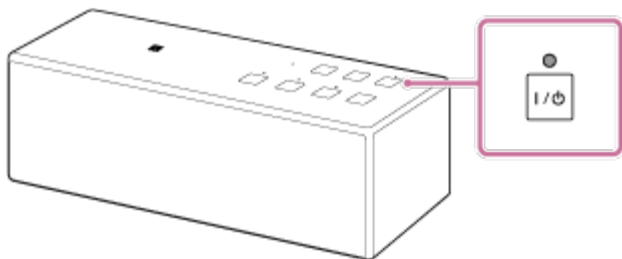3. Press and hold the  /  (power) button over 4 seconds until the  /  (power) indicator lights up in orange.



The speaker turns off and enters the BLUETOOTH standby mode.

If you connect to the speaker from a BLUETOOTH device, the speaker turns on automatically and starts the BLUETOOTH connection.

To turn off the BLUETOOTH standby function

Perform step 1 to 2 above again and press and hold the  /  (power) button over 4 seconds until the  /  (power) indicator goes off. The BLUETOOTH standby function is turned off and the speaker will turn off.


Related Topic

- [Connecting to an AC outlet](#)
- [Turning the power on](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

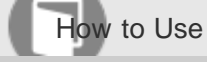

Personal Audio System
SRS-X3

Auto power off function

If the speaker is left in any of the following conditions for about 15 minutes, it turns off automatically.

When the speaker is in the BLUETOOTH mode

- No operation on the speaker.
- No BLUETOOTH connection has been established between the speaker and a smartphone or a mobile phone via HFP/HSP.
- No music (sound) is played, when the speaker is connected to a BLUETOOTH device.

When the speaker is in the AUDIO IN mode

- No operation on the speaker.
- No music (sound) is played on an audio device connected to the AUDIO IN jack.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



How to make wireless connection with BLUETOOTH devices

You can enjoy music and hands-free calling with the speaker wirelessly by using your device's BLUETOOTH function.

Before operating the speaker, be sure to do the following:

- Place the BLUETOOTH device within 1 m (3 ft) of the speaker.
- Connect the speaker to the AC outlet or charge the battery sufficiently.
- Prepare the operating instructions supplied with the BLUETOOTH device for reference.

Pairing the speaker with a BLUETOOTH device

Pairing is the process required to mutually register the information on BLUETOOTH devices to be connected wirelessly. It is necessary to pair a device with the speaker to be able to make BLUETOOTH connection for the first time.

Select your situation from the following 2 connecting patterns.

- Pairing and connecting with a BLUETOOTH device
- Connecting with a smartphone by one touch (NFC)

Connecting the speaker with the paired device

Once BLUETOOTH devices are paired, there is no need to pair them again. To connect a device already paired, refer to the following topic.

- Connecting with a paired BLUETOOTH device

Connecting the speaker with a smartphone by one touch (NFC)

By touching the speaker with a smartphone, the speaker is turned on automatically and then proceeds to pairing and making BLUETOOTH connection. For details, refer to the following topic.

- Connecting with a smartphone by one touch (NFC)
- Disconnecting the smartphone by one touch (NFC)
- Switching devices by one touch (NFC)

Compatible smartphones

NFC-compatible smartphones with Android 2.3.3 or later installed

NFC

NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as smartphones and IC tags.

Thanks to the NFC function, data communication - for example, BLUETOOTH pairing - can be achieved easily by simply touching NFC-compatible devices together (i.e., at the N-Mark symbol or location designated on each device).



Note

- Once BLUETOOTH devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - The speaker is already paired with 8 devices and another device is to be paired.
The speaker can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the paired device with the oldest connection time is replaced by the new one.
 - When the pairing information with the speaker has been deleted from the BLUETOOTH device.
 - When the speaker is initialized, all pairing information is deleted.
- The speaker can be paired with multiple devices, but can only play music from one paired device at a time.

Related Topic

- [Pairing and connecting with a BLUETOOTH device](#)
- [Connecting with a paired BLUETOOTH device](#)
- [Connecting with a smartphone by one touch \(NFC\)](#)
- [Disconnecting the smartphone by one touch \(NFC\)](#)
- [Switching devices by one touch \(NFC\)](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Pairing and connecting with a BLUETOOTH device

The speaker can be paired with up to 8 BLUETOOTH devices.

When pairing with 2 or more BLUETOOTH devices, perform the following pairing procedure for each device.

Before operating the speaker, be sure to do the following:


- Place the BLUETOOTH device within 1 m (3 ft) of the speaker.
- Connect the speaker to the AC outlet or charge the battery sufficiently.
- Prepare the operating instructions supplied with the BLUETOOTH device for reference.









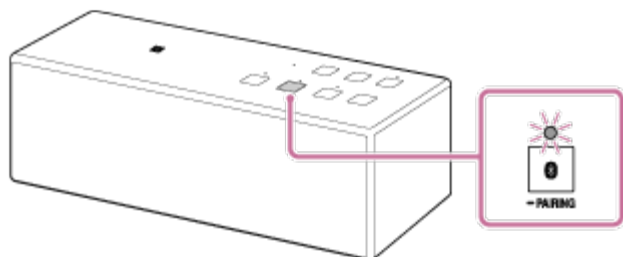


1. Turn on the speaker.


The  /  (power) indicator lights up in green.

2. Press the  (BLUETOOTH)  PAIRING button.

The  (BLUETOOTH) indicator begins to flash in white.




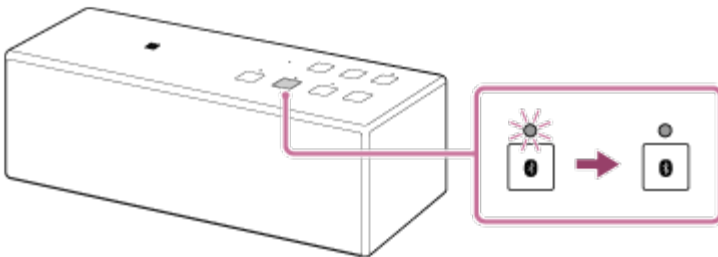
- From the factory, pairing information is not stored in the speaker. In this case, if you only press the  (BLUETOOTH)  PAIRING button, the  (BLUETOOTH) indicator will begin to flash quickly in white and the speaker enters pairing mode automatically.
 - If the pairing information is stored in the speaker, press and hold the  (BLUETOOTH)  button. Then, the speaker enters pairing mode automatically.
 - When you press the  (BLUETOOTH)  PAIRING button, the speaker tries to make BLUETOOTH connection with the last connected BLUETOOTH device. If the device is nearby, the BLUETOOTH connection is established automatically and the  (BLUETOOTH) indicator stays lit. When you want to connect another BLUETOOTH device, terminate the current BLUETOOTH connection by operating the currently connected BLUETOOTH device.
3. Press and hold the  (BLUETOOTH)  PAIRING button until beeps are heard and the  (BLUETOOTH) indicator begins to flash quickly in white.
The speaker enters pairing mode.

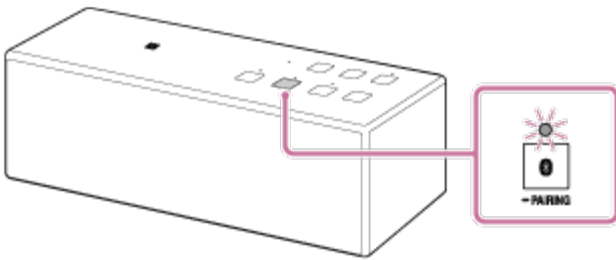

4. Perform the pairing procedure on the BLUETOOTH device to detect the speaker.
When a list of detected devices appears on the display of the BLUETOOTH device, select "SONY:SRS-X3."
If passkey* is required on the display of a BLUETOOTH device, enter "0000."

*A passkey may be called "Passcode", "PIN code", "PIN number", or "Password."

5. Make the BLUETOOTH connection from the BLUETOOTH device.
When the BLUETOOTH connection is established, the  (BLUETOOTH) indicator stays lit.




If the BLUETOOTH connection is not established, repeat from step 3.

Hint

- For details, refer to the operating instructions supplied with the BLUETOOTH device.

Note

- Pairing mode of the speaker is released after about 5 minutes and the  (BLUETOOTH) indicator flashes slowly. However, when pairing information is not stored in the speaker, such as from the factory, pairing mode is not released. If pairing mode is released before finishing the process, repeat from step 3.
- When pairing with a BLUETOOTH device that cannot display a list of detected devices or that has no display, you may pair the device by setting both the speaker and the BLUETOOTH device to pairing mode. At this time, if passkey is set besides "0000" on the BLUETOOTH device, pairing cannot be done with the speaker.
- Once BLUETOOTH devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - The speaker is already paired with 8 devices and another device is to be paired.
The speaker can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the paired device with the oldest connection time is replaced by the new one.
 - When the pairing information with the speaker has been deleted from the BLUETOOTH device.
 - When the speaker is initialized, all the pairing information is deleted.
- The speaker can be paired with multiple devices, but can only play music from one paired device at a time.

Related Topic

- [Listening to music of a device via BLUETOOTH connection](#)





Notes on use


4-544-752-11(1)




Copyright 2014 Sony Corporation


Personal Audio System
SRS-X3


Connecting with a paired BLUETOOTH device

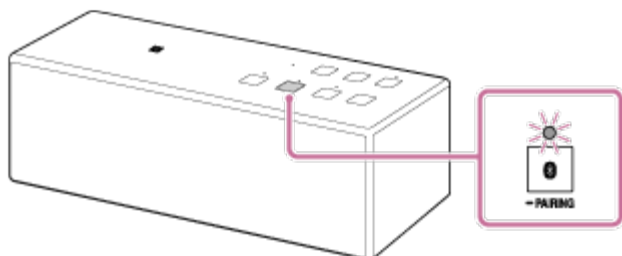1. Turn on the speaker.
The  (power) indicator lights up in green.
2. Press the  (BLUETOOTH)  PAIRING button.
The  (BLUETOOTH) indicator begins to flash in white.





When you press the  (BLUETOOTH)  PAIRING button, the speaker tries to make BLUETOOTH connection with the last connected BLUETOOTH device. If the device is nearby, the BLUETOOTH connection is established automatically and the  (BLUETOOTH) indicator stays lit. When you want to connect another BLUETOOTH device, terminate the current BLUETOOTH connection by operating the currently connected BLUETOOTH device.

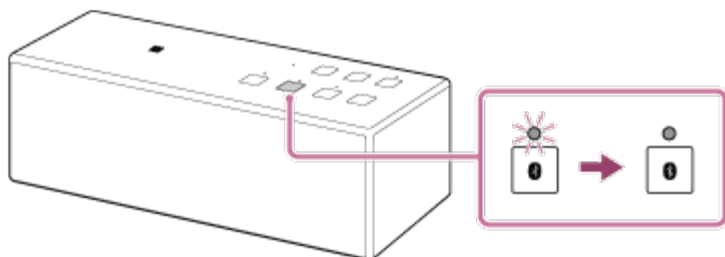3. Make the BLUETOOTH connection from the BLUETOOTH device.
When the BLUETOOTH connection is established, the  (BLUETOOTH) indicator stays lit.



Hint

- If the speaker is in the BLUETOOTH mode when you turn it on, the speaker tries to make BLUETOOTH connection with the last connected BLUETOOTH device. If the device's BLUETOOTH function is on, the BLUETOOTH connection is started automatically. If the connection is not established automatically, operate the BLUETOOTH device and make the connection.
- When the speaker enters the BLUETOOTH mode by pressing the  (BLUETOOTH)  PAIRING button, the speaker tries to make BLUETOOTH connection with the last connected BLUETOOTH device. If the device's

BLUETOOTH function is on, the BLUETOOTH connection is started automatically.

- When the BLUETOOTH standby function is turned on, the speaker turns on automatically by operating a BLUETOOTH device, and starts the BLUETOOTH connection.

Note

- If the speaker tries to make connection with the last connected BLUETOOTH device, connection may fail in some cases. In this case, terminate the BLUETOOTH connection by operating the connected BLUETOOTH device.

Related Topic

- [Using the BLUETOOTH standby function](#)
- [Pairing and connecting with a BLUETOOTH device](#)
- [Listening to music of a device via BLUETOOTH connection](#)
- [Terminating the BLUETOOTH connection \(After use\)](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Connecting with a smartphone by one touch (NFC)

By touching the speaker with an NFC-compatible smartphone, the speaker proceeds to pairing and BLUETOOTH connection, then turns on automatically after connection is established.

Compatible smartphones

NFC-compatible smartphones with Android 2.3.3 or later installed

NFC

NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as smartphones and IC tags.

Thanks to the NFC function, data communication - for example, BLUETOOTH pairing - can be achieved easily by simply touching NFC-compatible devices together (i.e., at the N-Mark symbol or location designated on each device).

1. Set the NFC function of the smartphone to on.

For details, refer to the operating instructions supplied with the smartphone.

- If your smartphone OS is Android 2.3.3 or later, and less than Android 4.1: proceed to step 2.
- If your smartphone OS is Android 4.1 or later: proceed to step 4.

2. Download and install the app "NFC Easy Connect" on the smartphone.

"NFC Easy Connect" is a free Android app you can download from Google Play.

Download the app by searching for "NFC Easy Connect" or access it by using the following two-dimensional code.

Fees may be charged for downloading the app.

Access the following Web site:

<https://play.google.com/store/apps/details?id=com.sony.easyconnect>

By the two-dimensional code:

Use a two-dimensional code reader app.



The app may not be downloadable in some countries/regions.


3. Start "NFC Easy Connect" on the smartphone.


Make sure that the app screen is displayed.

4. Touch the speaker with the smartphone.

Unlock the screen of the smartphone beforehand.


Keep touching the smartphone on the N-Mark of the speaker until the smartphone responds.

If the speaker is off, the  (BLUETOOTH) indicator begins to flash when the smartphone touches it. When the BLUETOOTH connection is established, the speaker turns on automatically.

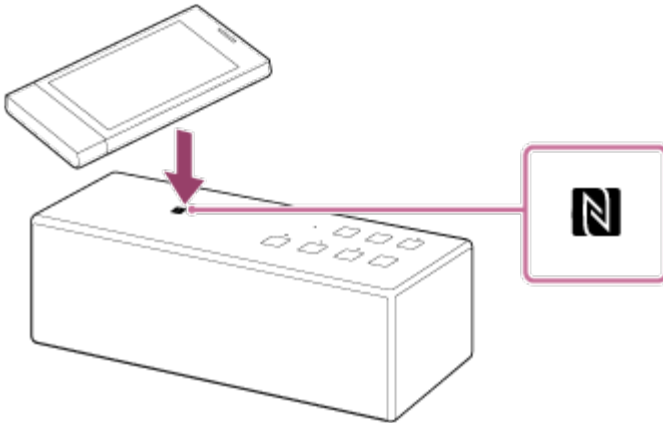

Follow the on-screen instructions to establish the connection.

When the BLUETOOTH connection is established,  (BLUETOOTH) indicator stays lit.

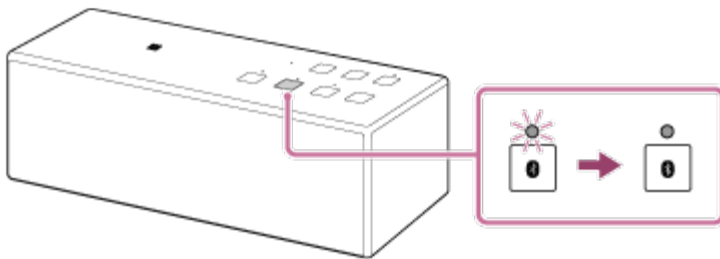

To disconnect, touch the speaker with the smartphone again.

Hint

- If you cannot connect the speaker, try the following.
 - Start the app on the smartphone, and move the smartphone slowly over the N-Mark of the speaker.
 - If the smartphone is in a case, remove the case.
 - Make sure that the app screen is displayed on the smartphone.
- If you touch a smartphone on the speaker, the smartphone terminates BLUETOOTH connection with any current device (NFC-compatible headset, etc.), and connects with the speaker (One-touch connection switching).

Note

- If your smartphone is the type that goes into standby mode in response to a magnetic force, it may be unable to be connected by NFC.

Related Topic

- [Disconnecting the smartphone by one touch \(NFC\)](#)

- Switching devices by one touch (NFC)
- Listening to music of a device via BLUETOOTH connection

Notes on use

4-544-752-11(1)


Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Disconnecting the smartphone by one touch (NFC)

You can disconnect the speaker from the connected smartphone by touching the speaker with it.

1. Touch the speaker with the smartphone.
Touch the smartphone on the N-Mark of the speaker.

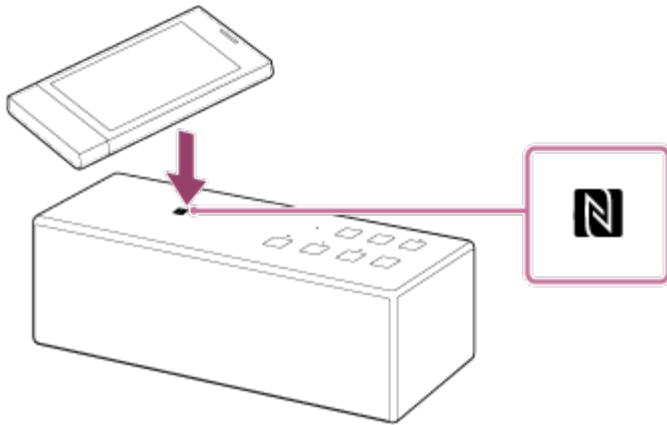**Hint**

- After the speaker is disconnected from the smartphone by one touch, if no operation is performed and no sound is input for about 15 minutes, the speaker turns off automatically by the auto power off function.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Switching devices by one touch (NFC)

- When the speaker is connected with a BLUETOOTH device, if you touch a smartphone on the N-Mark of the speaker, the speaker disconnects from the BLUETOOTH device, then connects with the smartphone. However, if you are talking on a BLUETOOTH mobile phone connected to the speaker, you cannot switch the BLUETOOTH connection by one touch.
- When the speaker is connected with a smartphone, if you touch the smartphone on another NFC-compatible BLUETOOTH headset or BLUETOOTH speaker, the smartphone disconnects from the speaker, and connects with the BLUETOOTH device it touched.

[Notes on use](#)

4-544-752-11(1)


Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Connecting to a portable audio device, etc.

Be sure to turn off the power of the device before making any connections.

1. Connect the device to the AUDIO IN jack using an audio cable (not supplied).

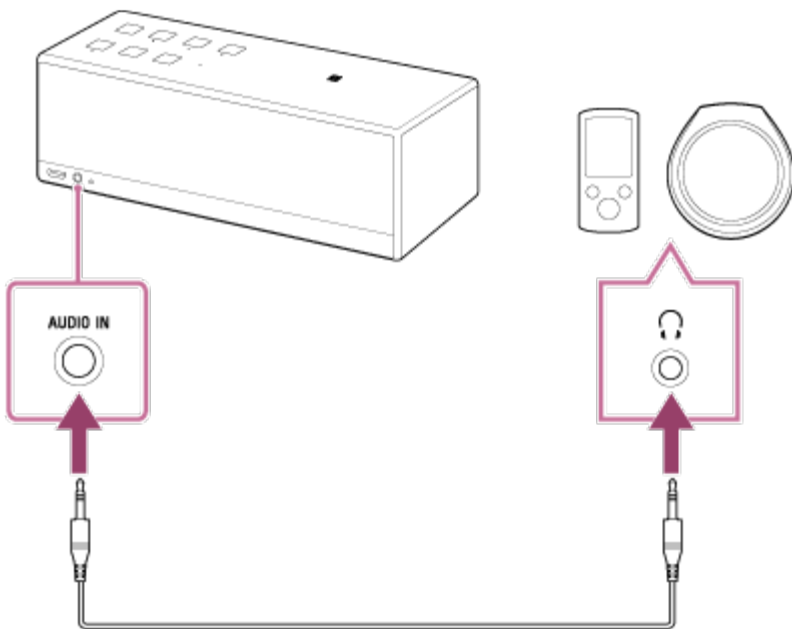

Hint

- For connection, use the cable that has a stereo mini plug at both ends.

Related Topic

- [Listening to music of a portable audio device, etc.](#)

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3


Listening to music of a device via BLUETOOTH connection


You can enjoy listening to music of a BLUETOOTH device and operate it via a BLUETOOTH connection if it supports the following BLUETOOTH profiles.

- A2DP (Advanced Audio Distribution Profile)
Enables you to enjoy high-quality audio contents wirelessly.
- AVRCP (Audio Video Remote Control Profile)
Enables you to adjust the volume of a BLUETOOTH device.

Operations may vary depending on the BLUETOOTH device. Refer also to the operating instructions supplied with your BLUETOOTH device.

1. Connect the speaker with the BLUETOOTH device.


The  (BLUETOOTH) indicator lights up in white when the BLUETOOTH connection is established.

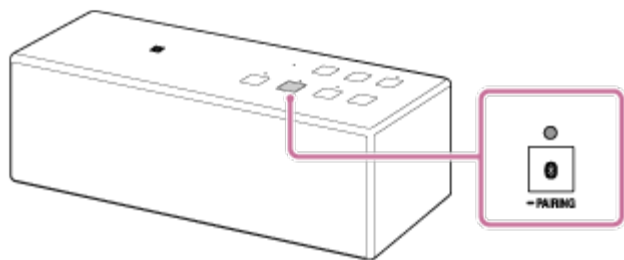


2. Start playback on the BLUETOOTH device, and adjust the volume.

Adjust the volume of the BLUETOOTH device to a moderate level.

 3. Press the VOL (volume) -/+ buttons to adjust the volume.

When you press the VOL (volume) -/+ buttons, the  (power) indicator flashes once in green.

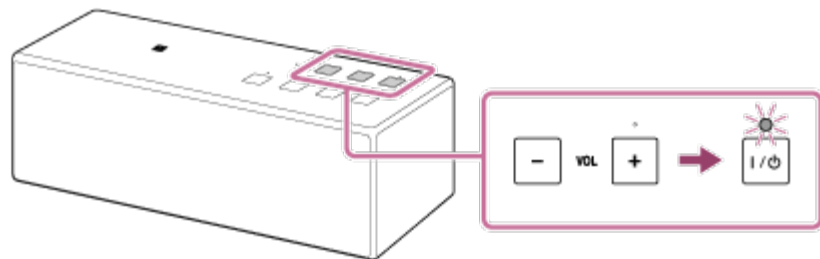

Hint

- Depending on the BLUETOOTH device, it may be necessary to adjust the volume or set the audio output setting on the connected device.

Note

- If the communication condition is poor, the BLUETOOTH device may react incorrectly to operations on the speaker.

Related Topic

- [Using the BLUETOOTH standby function](#)
- [How to make wireless connection with BLUETOOTH devices](#)
- [Terminating the BLUETOOTH connection \(After use\)](#)
- [Enjoying the surround effects](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Terminating the BLUETOOTH connection (After use)

When you finish playing music with the BLUETOOTH device, perform any of the following operations to terminate the BLUETOOTH connection.

- Turn off the BLUETOOTH function on the BLUETOOTH device. For details, refer to the operating instructions supplied with the device.
- Turn off the BLUETOOTH device.
- Turn off the speaker.
- Touch the smartphone on the speaker again (if your smartphone has the NFC function).
- Switch the function of the speaker to AUDIO IN mode by tapping the AUDIO IN button.

Hint

- If no operation is performed and no music (sound) is input by a BLUETOOTH device for about 15 minutes, the speaker turns off automatically by the auto power off function, then the BLUETOOTH connection terminates.
- When you finish playing music, the BLUETOOTH connection may terminate automatically, depending on the BLUETOOTH device.

Related Topic

- [Turning the power off](#)
- [Auto power off function](#)
- [Disconnecting the smartphone by one touch \(NFC\)](#)

[Notes on use](#)

4-544-752-11(1)


Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3


Listening to music of a portable audio device, etc.

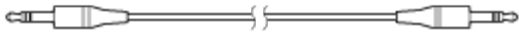

You can use the speaker as an ordinary wired speaker system by connecting a portable audio device, etc., using an audio cable (not supplied).


1. Connect the speaker to the device using an audio cable.
For connection, use the cable that has a stereo mini plug at both ends.

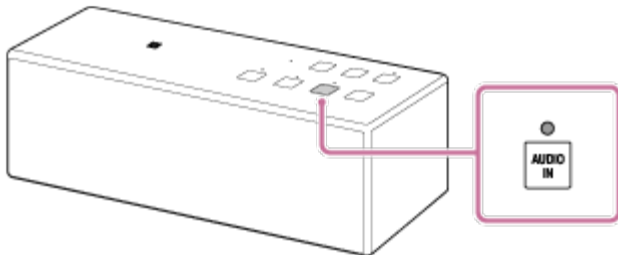

2. Turn on the speaker.
The  /  (power) indicator lights up in green.
3. Press the AUDIO IN button.
The AUDIO IN indicator lights up in white and the AUDIO IN function turns on.



4. Turn on the connected device.
5. Start playback on the connected device, and adjust the volume.
Adjust the volume of the connected device to a moderate level.
6. Press the VOL (volume) $-/+$ buttons to adjust the volume.
When you press the VOL (volume) $-/+$ buttons, the  /  (power) indicator flashes once in green.

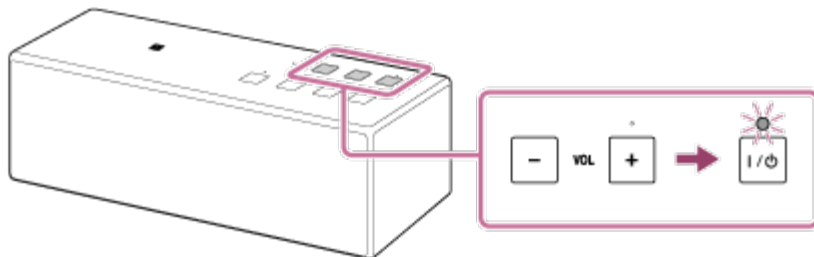

- While the AUDIO IN function is turned on, the hands-free function is not available.

Related Topic

- [Connecting to a portable audio device, etc.](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation


Personal Audio System
SRS-X3

Enjoying the surround effects

You can select the surround effects with the SOUND button.

1. Press the SOUND button to select the surround effect.

The SOUND indicator shows the current surround effect setting. Each time you press the SOUND button, the selected effect switches.

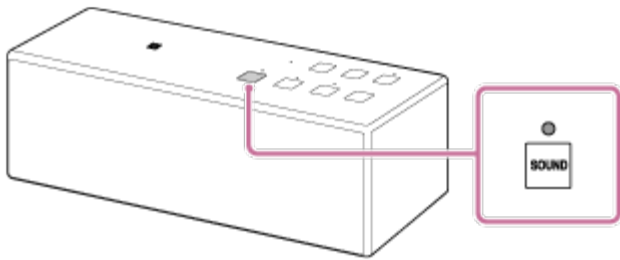

Indications of the SOUND indicator

Off

You can enjoy ClearAudio+ mode (Sony-recommended sound quality). This mode is set as the default setting.

Lights up (white)

You can enjoy the surround effect (High).

Hint

- The current sound setting is retained when the speaker is turned off.

Note

- Depending on the music, the surround effects may not be so noticeable.

Related Topic

- [Listening to music of a device via BLUETOOTH connection](#)
- [Listening to music of a portable audio device, etc.](#)

Personal Audio System
SRS-X3

Receiving a call

You can enjoy a hands-free call with a BLUETOOTH mobile phone that supports the BLUETOOTH profile HFP (Hands-free Profile) or HSP (Headset Profile), via a BLUETOOTH connection.

- If your BLUETOOTH mobile phone supports both HFP and HSP, set it to HFP.
- Operations may vary depending on the BLUETOOTH mobile phone. Refer to the operating instructions supplied with your mobile phone.


About ring tone

When an incoming call arrives, a ring tone will be heard via the speaker.

The ring tone varies in the following ways, depending on your BLUETOOTH mobile phone.

- Ring tone set on the speaker
- Ring tone set on the BLUETOOTH mobile phone
- Ring tone set on the BLUETOOTH mobile phone only for a BLUETOOTH connection


1. Connect the speaker with a BLUETOOTH mobile phone.

The  (BLUETOOTH) indicator lights up in white when the BLUETOOTH connection is established.


2. Press the  (call) button when a call is received.

Talk into the microphone of the speaker.


When an incoming call arrives, playback pauses and a ring tone is heard from the speaker.

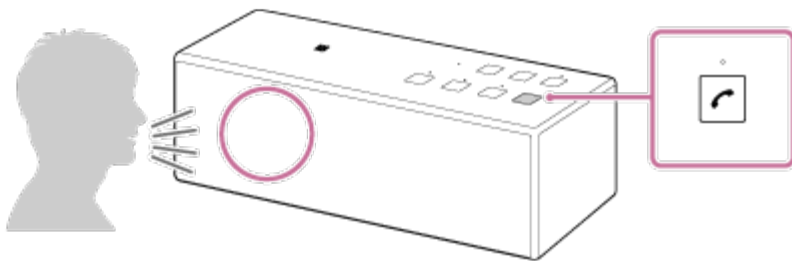


If no ring tone is heard via the speaker


- The speaker may not connect with a BLUETOOTH mobile phone with HFP or HSP. Check the connection status on the BLUETOOTH mobile phone.
- Switch the call device to the speaker by pressing and holding the  (call) button for about 2 seconds.

 3. Press the VOL (volume) -/+ buttons to adjust the volume.

 When you press the VOL (volume) -/+ buttons, the  (power) indicator flashes once in green.

When you press the VOL (volume) -/+ buttons at the lowest or highest level, the  (power) indicator flashes


three times in green.

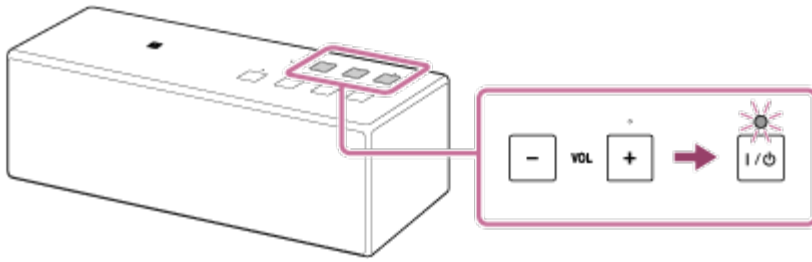

4. To end a call, press the  (call) button.

If you were listening to music when the call arrived, playback will be resumed when the call ends.

Hint

- Some BLUETOOTH mobile phones have handset use priority when receiving a call. In the case of the HFP or HSP connection, talk on the speaker by pressing and holding the  (call) button for about 2 seconds, or by using your BLUETOOTH mobile phone.
- If you adjust the volume on the speaker when not talking, the playback volume is adjusted.
- If the caller cannot hear or can barely hear your voice, talk more directly into the microphone of the speaker.
- During a call, tap the VOL (volume) +/- buttons on the speaker to adjust the volume. In the speaker, the volume of music playback and calling is set independently.

Note

- The sound is output from the right speaker only during a call.
- Depending on the BLUETOOTH mobile phone, playback may not pause when an incoming call arrives.
- Use a BLUETOOTH mobile phone at least 50 cm from the speaker. Noise may result if the speaker and the BLUETOOTH mobile phone are too close.

Related Topic

- [How to make wireless connection with BLUETOOTH devices](#)
- [Terminating the BLUETOOTH connection \(After use\)](#)
- [Making a call](#)
- [Button functions for a phone call](#)
- [Making a call while playing back music \(Multi point connection\)](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation


Personal Audio System
SRS-X3

Making a call

You can enjoy a hands-free call with a BLUETOOTH mobile phone that supports the BLUETOOTH profile HFP (Hands-free Profile) or HSP (Headset Profile), via a BLUETOOTH connection.


- If your BLUETOOTH mobile phone supports both HFP and HSP, set it to HFP.
- Operations may vary depending on the BLUETOOTH mobile phone. Refer to the operating instructions supplied with your mobile phone.

1. Connect the speaker with a BLUETOOTH mobile phone.


The  (BLUETOOTH) indicator lights up in white when the BLUETOOTH connection is established.

2. Operate the BLUETOOTH mobile phone to make a call.


When you make a call, playback pauses and the dial tone is heard from the speaker. When the receiver takes the call, talk into the microphone of the speaker.

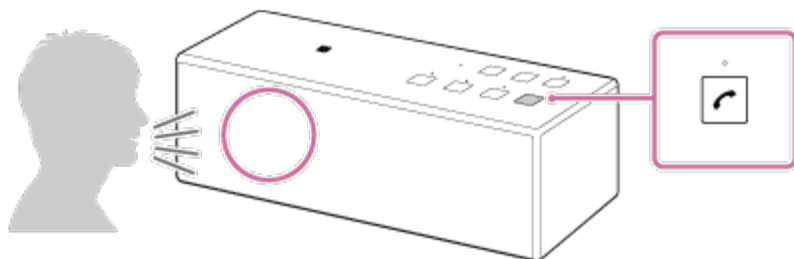


If no dial tone is heard via the speaker

- The speaker may not connect with a BLUETOOTH mobile phone with HFP or HSP. Check the connection status on the BLUETOOTH mobile phone.
- Switch the call device to the speaker by pressing and holding the  (call) button for about 2 seconds.

3. Press the VOL (volume) -/+ buttons to adjust the volume.

When you press the VOL (volume) -/+ buttons, the  (power) indicator flashes once in green.

When you press the VOL (volume) -/+ buttons at the lowest or highest level, the  (power) indicator flashes 3 times in green.

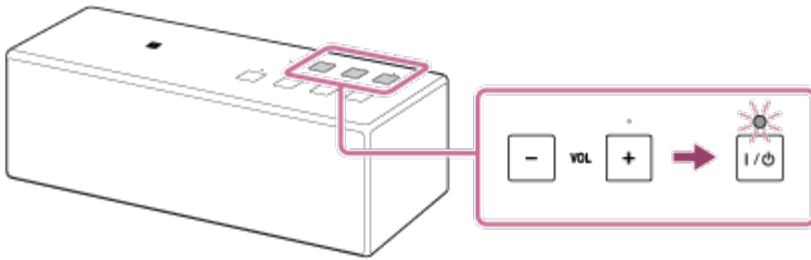

4. To end a call, press the  (call) button.

If you were listening to music when you made the call, playback will be resumed when the call ends.

Hint

- If you adjust the volume on the speaker when not talking, the playback volume is adjusted.
- If the caller cannot hear or can barely hear your voice, talk more directly into the microphone of the speaker.
- During a call, tap the VOL (volume) -/+ buttons on the speaker to adjust the volume. In the speaker, the volume of music playback and calling is set independently.

Note

- The sound is output from the left speaker only during a call.
- Depending on the BLUETOOTH mobile phone, playback may not pause when making a call.
- Use a BLUETOOTH mobile phone at least 50 cm from the speaker. Noise may result if the speaker and the BLUETOOTH mobile phone are too close.

Related Topic

- [How to make wireless connection with BLUETOOTH devices](#)
- [Terminating the BLUETOOTH connection \(After use\)](#)
- [Receiving a call](#)
- [Button functions for a phone call](#)
- [Making a call while playing back music \(Multi point connection\)](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Button functions for a phone call



The available functions may vary depending on the profile supported by your BLUETOOTH mobile phone. Even if the profile is the same, functions may vary depending on the BLUETOOTH mobile phone.

Refer to the manual supplied with your BLUETOOTH mobile phone.



Standby

- Press the  (call) button once to start voice-dial (voice-dial compatible mobile phones only).
- Press and hold the  (call) button for about 2 seconds to redial the last-dialed phone number.



Outgoing call

- Press the  (call) button once to cancel an outgoing call.
- Press and hold the  (call) button for about 2 seconds to change the call device between the speaker and mobile phone.

Incoming call

- Press the  (call) button once to answer a call.
- Press and hold the  (call) button for about 2 seconds to reject a call.

During call

- Press the  (call) button once to finish a call.
- Press and hold the  (call) button for about 2 seconds to change the call device between the speaker and mobile phone.

Note

- Depending on the smartphone, tablet device, or applications installed, the redial function may not work correctly.

Related Topic


- [Receiving a call](#)
- [Making a call](#)


Personal Audio System
SRS-X3

Making a call while playing back music (Multi point connection)

Since the speaker is compatible with the multi point connection function, you can receive an incoming call to another BLUETOOTH mobile phone connected to the speaker, even while listening to music played from a BLUETOOTH music player connected to the speaker.

When making an outgoing call by the phone, or an incoming call arrives to the phone, playback pauses and the dial tone or ring tone is heard from the speaker.

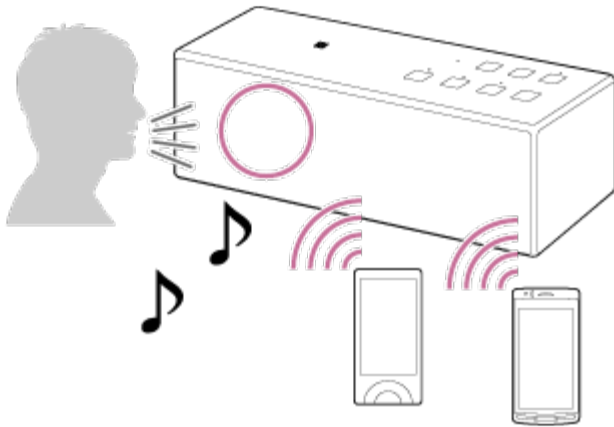

- The multi point connection function is not available with one-touch connection (NFC).
 - The connection procedure varies depending on the BLUETOOTH device. Also, a connection may not be possible depending on the combination of devices. Refer to the operating instructions supplied with your devices for information on the connection procedure.
1. Connect the speaker with a BLUETOOTH music player with A2DP, and a BLUETOOTH mobile phone with HFP or HSP.
The  (BLUETOOTH) indicator lights up in white when connection with either device is established.

Hint

- To only make a call on a BLUETOOTH mobile phone that has a music playback function, select HFP or HSP on the mobile phone, not A2DP.
- Depending on the BLUETOOTH device, when you connect with HFP or HSP, an A2DP connection is also made. In this case, you cannot connect the speaker with other music players.

Note

- To reconnect the speaker to the same 2 devices, repeat the connection procedure above.



About the indicators

CHARGE indicator (orange)

Turns off (while the speaker is turned off)

Charging of the speaker is completed.

Lights up (orange) (while the speaker is turned off)

The speaker is charging.

 
Flashes slowly (orange) (while the speaker is turned on)

The built-in battery is running low and needs to be charged. In this state, the speaker cannot supply power to other devices.

Flashes three times (orange) and turns off

If the CHARGE indicator flashes three times in orange and goes off when you turn on the speaker, the battery is empty and needs to be charged.

Note

- In an extremely cold or hot environment, charging may end prematurely or may not be possible.
- When the battery is running low, even if you press the  (power) button, the speaker may turn off after the CHARGE indicator flashes in orange 3 times. This is not malfunction.

(power) indicator

Turns off

The speaker is turned off.

Lights up (green)

The speaker is turned on.

Lights up (orange)

The speaker is in BLUETOOTH standby mode.

Flashes once (green)

Each time you press the VOL (volume) +/- button, the indicator flashes once.

Flashes three times (green)

The volume is set at the lowest or highest level.

AUDIO IN indicator

Lights up (white)

The speaker is in the AUDIO IN mode.

 (BLUETOOTH)  PAIRING indicator

Lights up (white)

The speaker is connected to a BLUETOOTH device.

Flashes quickly (white)

The speaker is pairing with a BLUETOOTH device.

Flashes (white)

The speaker is searching for a BLUETOOTH device to connect.

SOUND indicator

Turns off

You can enjoy ClearAudio+ mode (Sony-recommended sound quality). This mode is set as the default setting.

Lights up (white)

You can enjoy the surround effect (High).

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Precautions

Note when using with a mobile phone

- For details on operation of your mobile phone when receiving a telephone call while transmitting the sound using the BLUETOOTH connection, refer to the operating instructions supplied with the mobile phone.

On safety

The nameplate and important information concerning safety are located on the bottom exterior of the speaker and on the surface of the USB AC adaptor.

- Before operating the speaker, be sure that the operating voltage of the speaker is identical with that of your local power supply.
 - Where purchased: all countries/regions
 - Operating voltage: 100 V – 240 V AC, 50 Hz/60 Hz

Notes on the USB AC adaptor

- When connecting or disconnecting the USB AC adaptor, turn off the speaker beforehand. Otherwise, it may cause malfunction.
- Use only the supplied USB AC adaptor. To avoid damaging the speaker, do not use any other USB AC adaptor.
- Plug the USB AC adaptor into a nearby wall outlet (mains). In the case of a problem, unplug it from the wall outlet (mains) immediately.
- Do not install the USB AC adaptor in a confined space, such as a bookcase or built-in cabinet.
- To reduce the risk of fire or electric shock, do not expose the USB AC adaptor to dripping or splashing, and do not place objects filled with liquids, such as vases, on the USB AC adaptor.

On placement

- Do not set the speaker in an inclined position.
- Do not leave the speaker in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock. This speaker is not waterproof.
- Do not use the speaker in a car.

On operation

- Battery usage life may vary depending on ambient temperature or conditions of use. For example, using the speaker at a loud volume shortens the battery usage life.
- Do not insert any small objects, etc., into the jacks or ventilation hole on the rear of the speaker. The speaker may short out or malfunction.

On cleaning

- Do not use alcohol, benzine, or thinner to clean the cabinet.
- If fine dust adheres to the speaker, use the sticky roll cleaner to clean it.

Others

- If you have any questions or problems concerning the speaker that are not covered in this Help Guide, please consult your nearest Sony dealer.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Notes on charging

Caution

If the speaker detects a problem while charging the battery, the CHARGE indicator (orange) may turn off, although charging is not completed.

Check for the following causes:

- Ambient temperature exceeds the range of 5 °C – 35 °C (41 °F – 95 °F).
- There is a problem with the battery.

Note

- Charging time varies depending on battery usage conditions.
- Charge the speaker in an ambient temperature of between 5 °C and 35 °C (41 °F and 95 °F).
- The speaker becomes warm during charging. This is not a malfunction.
- If the speaker is not used for a long time, it may take longer to charge the battery.
- Avoid exposure to rapid temperature change, direct sunlight, moisture, sand, dust, or mechanical shock. Also, never leave the speaker in a car parked in the sun.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



What is BLUETOOTH wireless technology?

BLUETOOTH wireless technology is a short-range wireless technology that enables wireless data communication between digital devices, such as a computer and digital camera. BLUETOOTH wireless technology operates within a range of about 10 m (about 30 ft).

Connecting two devices as necessary is common, but some devices can be connected to multiple devices at the same time.

You do not need to use a cable for connection, nor is it necessary for the devices to face one another, such is the case with infrared technology. For example, you can use such a device in a bag or pocket.

BLUETOOTH standard is an international standard supported by thousands of companies all over the world, and employed by various companies worldwide.

Maximum communication range

Maximum communication range may shorten under the following conditions.

- There is an obstacle such as a person, metal, or wall between the speaker and BLUETOOTH device.
- A wireless LAN device is in use near the speaker.
- A microwave oven is in use near the speaker.
- A device that generates electromagnetic radiation is in use near the speaker.

Interference from other devices

Because BLUETOOTH devices and wireless LAN (IEEE802.11b/g) use the same frequency, microwave interference may occur and resulting in communication speed deterioration, noise, or invalid connection if the speaker is used near a wireless LAN device. In such a case, perform the following.

- Use the speaker at least 10 m (about 30 ft) away from the wireless LAN device.
- If the speaker is used within 10 m (about 30 ft) of a wireless LAN device, turn off the wireless LAN device.

Interference to other devices

Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off the speaker and other BLUETOOTH devices in the following locations, as it may cause an accident.

- where inflammable gas is present, in a hospital, train, airplane, or a gas station
- near automatic doors or a fire alarm

Note

- To be able to use the BLUETOOTH function, the BLUETOOTH device to be connected requires the same profile as the system's.
- Note also that even if the same profile exists, devices may vary in function depending on their specifications.

Due to the characteristic of BLUETOOTH wireless technology, the sound played on the speaker is slightly delayed from the sound played on the BLUETOOTH device during talking on the telephone or listening to the music.

- This speaker supports security capabilities that comply with the BLUETOOTH standard to provide a secure connection when the BLUETOOTH wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using BLUETOOTH wireless technology.
- We do not take any responsibility for the leakage of information during BLUETOOTH communication.
- A device featuring the BLUETOOTH function is required to conform to the BLUETOOTH standard specified by Bluetooth SIG, and be authenticated. Even if the connected device conforms to the above mentioned BLUETOOTH standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.
- Noise or sound skips may occur depending on the BLUETOOTH device connected with the speaker, the communication environment or the usage environment.

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Trademarks

- SONY is a trademark of Sony Corporation.
- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.
- "S-Master" is a trademark of Sony Corporation.
- ClearAudio+ and **ClearAudio+** are trademarks of Sony Corporation.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- Android™ and Google Play™ are trademarks of Google Inc.

All other product names mentioned in this Help Guide may be the trademarks or registered trademarks of their respective companies. Furthermore, ® and ™ are not mentioned in each case in this Help Guide.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation



Personal Audio System
SRS-X3

Customer support websites

Please access the following support home page to get the support information about your speaker:

For customers in the USA:

<http://esupport.sony.com/>

For customers in Canada:

<http://esupport.sony.com/CA/>

For customers in European countries:

<https://www.sony-europe.com/>

For customers in other countries/regions:

<http://www.sony-asia.com/>

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

What can I do to solve a problem?

If the speaker does not function as expected, try the following steps to resolve the issue.

- Find the symptoms of the issue in this Help Guide, and try any corrective actions listed.
- Connect the speaker to an AC outlet to charge the battery.
You may be able to resolve some issues by charging the battery.
- Push the RESET button of the speaker.
- Initialize the speaker.
This operation resets volume settings, etc., and deletes all pairing information.
- Look up information on the issue on the customer support website.

If the operations above do not work, consult your nearest Sony dealer.

Related Topic

- [Connecting to an AC outlet](#)
- [Customer support websites](#)
- [Using the RESET button](#)
- [Initializing the speaker](#)

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Unable to turn on the speaker or charge the built-in battery

- Charge the built-in battery.
- Make sure the USB AC adaptor is connected to the speaker and the AC outlet firmly.
- Make sure the micro-USB cable and the USB AC adaptor are connected firmly.

Related Topic

- [Connecting to an AC outlet](#)
- [Turning the power on](#)
- [About the indicators](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

No sound/Sound from only one speaker/Low sound level

- Check that both the speaker and the connected device are turned on.
- Turn up the volume of the speaker and the connected device.
- Check that the connected device is playing back.
- Check that both plugs of the audio cable (not supplied) are firmly inserted into the speaker and the connected device.
- If you are connecting a personal computer to the speaker, make sure the audio output setting of the computer is set for a BLUETOOTH device.
- Check that the speaker has established BLUETOOTH connection with the BLUETOOTH device.
- Pair the speaker and the BLUETOOTH device again.
- If the device that is connected to the AUDIO IN jack is monaural, sound will only be output from the left speaker.

Related Topic

- [How to make wireless connection with BLUETOOTH devices](#)
- [Connecting to a portable audio device, etc.](#)
- [Listening to music of a device via BLUETOOTH connection](#)
- [Listening to music of a portable audio device, etc.](#)

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Distorted sound/Humming or noise in the speaker output

- Turn down the volume of the connected device.
- If the connected device has an equalizer function, set it to off.
- Keep the speaker away from a microwave oven, Wi-Fi, etc.
- Bring the speaker and the BLUETOOTH device closer together. Remove any obstacles between the speaker and the BLUETOOTH device.
- Keep the speaker away from a TV.
- Switch the BLUETOOTH connection to A2DP by operating the BLUETOOTH device when HFP or HSP is set.
- Charge the speaker by connecting the USB AC adaptor if the CHARGE indicator (orange) is flashing.
- If you connect a device with a built-in radio or tuner to the speaker, broadcasts may not be received, or sensitivity may be reduced. Locate the speaker farther away from the device and check that you can listen to the broadcasts satisfactorily.

Related Topic

- [Connecting to an AC outlet](#)
- [Listening to music of a device via BLUETOOTH connection](#)
- [About the indicators](#)





[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Unable to pair the speaker with a BLUETOOTH device

- Bring the speaker and the BLUETOOTH device to within 1 m (3 ft) of each other.
- If the  (BLUETOOTH) indicator is not flashing quickly in white, press and hold the  (BLUETOOTH)  (PAIRING) button until the speaker beeps and the  (BLUETOOTH) indicator starts flashing quickly in white.
- Connect the speaker to an AC outlet or charge the battery of the speaker sufficiently.

Related Topic

- [Connecting to an AC outlet](#)
- [How to make wireless connection with BLUETOOTH devices](#)
- [About the indicators](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Unable to connect the speaker to a BLUETOOTH device with One-touch connection (NFC)

- Keep the smartphone close to the speaker until the smartphone reacts. If you fail to connect, move the smartphone slowly on the N-Mark of the speaker.
- Check that the NFC function of the smartphone is set to on.
- If the smartphone is in a case, remove it.
- NFC reception sensitivity varies, depending on the device. If you repeatedly fail to connect the speaker with a smartphone by one touch, connect it to the speaker by on-screen operation.
- Check that your smartphone is compatible with NFC. Look up information on the issue on the customer support website.

Related Topic

- [Connecting with a smartphone by one touch \(NFC\)](#)

Notes on use

4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

No voice/Low voice from callers

- Check that both this speaker and the connected device are turned on.
- Turn up the volume of the speaker and the connected device.
- Check that output of the BLUETOOTH mobile phone is set for the speaker.
- Select an HFP or HSP BLUETOOTH connection by operating the BLUETOOTH device.

Related Topic

- [How to make wireless connection with BLUETOOTH devices](#)
- [Receiving a call](#)
- [Making a call](#)

Notes on use


4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3


Using the RESET button

If the speaker cannot be turned on, or if it cannot be operated even when it is turned on, push the RESET button on the rear side with a pointed object, such as a pin. The speaker is reset and turns off.

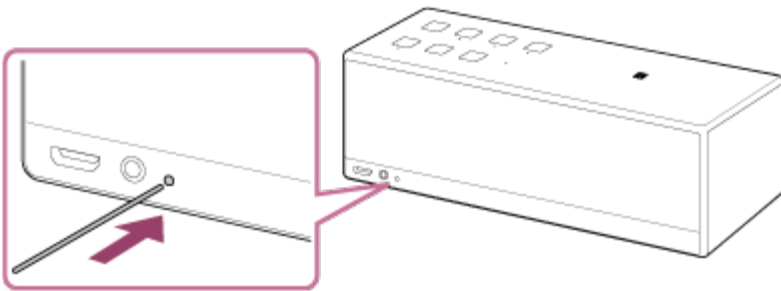

After pushing the RESET button, turn on the speaker. If it does not turn on, consult your nearest Sony dealer.

Note

- To reset the speaker while it is being powered by the built-in battery, push and hold the RESET button until the  (power) indicator turns off.
- After resetting, the volume, function, and sound settings may be different.


[Notes on use](#)


4-544-752-11(1)

Copyright 2014 Sony Corporation

Personal Audio System
SRS-X3

Initializing the speaker

With the speaker turned on, while holding the VOL (volume) - button, press and hold the | /  (power) button for 5 seconds, so as to turn the speaker off.

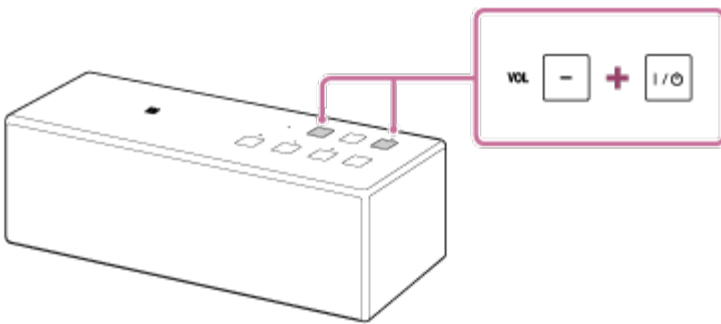

The speaker is initialized. Settings such as volume, etc., are restored to the factory default settings, and all pairing information is deleted.

Note

- To turn on the speaker after initializing it, connect the speaker to an AC outlet via the USB AC adaptor. If the speaker is being powered by the built-in battery, it cannot be turned on.

[Notes on use](#)

4-544-752-11(1)

Copyright 2014 Sony Corporation